



PUC[®] PICK-UP CABINET OWNER / OPERATOR'S MANUAL SLIMLINE HEATED & AMBIENT MODELS

MANUFACTURED BY:

CARTER-HOFFMANN
1551 McCormick Avenue
Mundelein, IL 60060 U.S.A.

Phone: 847-362-5500
Fax: 847-367-8981
Toll Free: 800-323-9793
Email: TechnicalService@Carter-Hoffmann.com

ORIGINAL INSTRUCTIONS



Read entire manual before operating this cabinet.



GENERAL INFORMATION

- This appliance is intended for use in commercial establishments, where all operators are familiar with the appliance use, limitations and associated hazards.
- Operating instructions and warnings must be read and understood by all operators and users.
- Cleanliness of this appliance is essential to good sanitation. Read and follow all included cleaning instructions and schedules to ensure the safety of the food product.
- All included instructions, component views and parts lists are included for general reference, and are intended for use by qualified service personnel.
- Knowledge of proper installation, operation and maintenance procedures is essential to ensure the safe operation of this cabinet.

SERVICE / SAFETY

- Always have dry hands prior to using the piece of equipment.
- Turn OFF the unit anytime the cabinet is not in use.
- If an electrical shock is felt when touching the cabinet, disconnect the power immediately and call Carter-Hoffmann Technical Service for assistance.
- If the power cord is frayed or the plug damaged, DO NOT plug into the electrical power receptacle. If it is already plugged in, turn off the main circuit breaker, usually located in the building's breaker box, then disconnect the plug.
- Disconnect the power cord before attempting any repairs to the cabinet.
- Repairs to this unit must be by qualified personnel.
- DO NOT SPRAY WITH WATER OR CLEANING SOLUTIONS, or submerge the appliance. Components and wiring present a high shock hazard when wet.



CAUTION: EQUIPMENT ELECTRICAL DAMAGE
Do not plug in or use this appliance until all Installation Instructions are read and followed.

This manual is considered to be a permanent part of this appliance and must remain with the appliance if it is sold or moved to another location

TABLE OF CONTENTS

SAFETY PRECAUTIONS	2
SPECIFICATIONS	3-4
UNPACKING AND INSTALLATION	5-7
NETWORK CONNECTION	7-9
START UP AND MANUAL OPERATION	10-13
PROGRAMMING THE TEMPERATURE	14-15
CLEANING	16
SERVICE AND SHIPPING DAMAGE PROCEDURE	17
WARRANTY	18

SAFETY PRECAUTIONS



WARNING!

This symbol highlights hazards, which could lead to injury. Please follow the instructions very carefully and proceed with particular attention in these cases



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



NOTE!

This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.



DANGER! Electrical Shock Hazard!

This symbol draws attention to potential electrical hazards (dangerous voltage). If you do not follow the safety instructions, you may risk injury or death



CAUTION! Hot Surface!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning shall result in burns!



WARNING! Scalding Hazard!

To avoid scalding, do not use loaded containers with liquids or cooking goods which become fluids by heating in higher levels than those which can be easily observed.

These appliances are intended to be used for commercial applications, for example, in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., but not for continuous mass production of food.

This appliance can be used by children from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be adhered to, including the following:

- 1) Be familiar with the appliance use, limitations and associated restrictions. Operating instructions must be read and understood by all persons using or installing this appliance.
- 2) This appliance must be grounded. Connect only to properly grounded outlet.
- 3) Use this appliance only for its intended use as described in this manual.
 - a. This equipment is specifically designed to hold pre-cooked food at temperature.
 - b. This equipment is intended for use in commercial establishments only.
 - c. This equipment is not designed for industrial or laboratory use.
- 4) Cleanliness of this appliance and accessories is essential to good sanitation.
- 5) **DO NOT** submerge this appliance in water. This appliance is not jet stream approved. **DO NOT** direct water jet or steam jet at this appliance, or at any control panel or wiring. **DO NOT** splash or pour water on, in or over any controls, control panel or wiring. **DO NOT** use corrosive chemicals or vapors in this appliance.
- 6) **DO NOT** store this appliance outdoors. **DO NOT** use this product near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- 7) **DO NOT** operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse cord or plug in water, keep cord away from heated surfaces, and do not let cord hang over edge of table or counter.
- 8) **Only qualified service personnel should service this appliance.**
- 9) **DO NOT** cover or block any openings on the appliance.

NOTE:

The technical content of this manual, including any wiring diagrams, schematics, parts breakdown illustrations and/or adjustment procedures, is **intended for use by qualified technical personnel** and is subject to change without notice.

SPECIFICATIONS—FLOOR STANDING HEATED & AMBIENT MODELS



PUCA-24S (center) shown with two PUCA-14AO cabinets on each end

Carter-Hoffmann counter-top PUC Smart Order Pick Up cabinets are designed for automated pick-up, carry-out and drop-off. Add-on cabinets can be connected to Master cabinets for flexible capacity. Cabinets are connected via Ethernet or WI-FI to generate an order code for notification. They feature a capacitive touchscreen with scanner for order loading and pick-up. They can be stand-alone for manual order entry or can be integrated with POS software for seamless function, data collection and analytics. Software includes order management, customer notification and cleaning cycle notification. Stainless steel construction with anti-microbial powder-coated exterior. Each locker is 12"W x 14"H x 14"D (304 x 356 x 356 mm) with an automatic pop-latch door, manual close.

Cabinets come in heated or ambient, counter-top or floor models, front-loaded or pass-through, master cabinet controls in center, on the left or on the right; doors have a polycarbonate viewing window.



Specifications

Model Number	Number of Cubbies	Loading Style	Height		Depth		Width		Shipping Weight	
			in	mm	in	mm	in	mm	lbs	kg
PUCA-24S	8	Front	78 1/2	1994	16 5/8	422	44 1/4	1124	310	141
PUCA-24S-PT	8	Pass-Thru	78 1/2	1994	16 5/8	422	44 1/4	1124	310	141
PUCA-14SAO	4	Front	78 1/2	1994	16 5/8	422	17 1/8	435	136	62
PUCA-14SAO-PT	4	Pass-Thru	78 1/2	1994	16 5/8	422	17 1/8	435	136	62
PUCA-24SAO	8	Front	78 1/2	1994	16 5/8	422	34 1/8	867	310	141
PUCA-24SAO-PT	8	Pass-Thru	78 1/2	1994	16 5/8	422	34 1/8	867	310	141
PUCH-24S	8	Front	78 1/2	1994	16 5/8	422	44 1/4	1124	310	141
PUCH-24S-PT	8	Pass-Thru	78 1/2	1994	16 5/8	422	44 1/4	1124	310	141
PUCH-14SAO	4	Front	78 1/2	1994	16 5/8	422	17 1/8	435	136	62
PUCH-14SAO-PT	4	Pass-Thru	78 1/2	1994	16 5/8	422	17 1/8	435	136	62
PUCH-24SAO	8	Front	78 1/2	1994	16 5/8	422	34 1/8	867	310	141
PUCH-24SAO-PT	8	Pass-Thru	78 1/2	1994	16 5/8	422	34 1/8	867	310	141

Electrical Characteristics-Ambient Cabinets

Model	Volts	Amps	Hz	Phase	Plug
PUCA-24S	120	1	60	Single	NEMA 5-15P
PUCA-24S-PT	120	1	60	Single	NEMA 5-15P
PUCA-14SAO	120	0.75	60	Single	NEMA 5-15P
PUCA-14SAO-PT	120	0.75	60	Single	NEMA 5-15P
PUCA-24SAO	120	1	60	Single	NEMA 5-15P
PUCA-24SAO-PT	120	1	60	Single	NEMA 5-15P

Electrical Characteristics-Heated Cabinets

Model	Volts	Amps	Hz	Phase	Plug
PUCH-24S	120	16	60	Single	NEMA 5-20P
PUCH-24S-PT	120	16	60	Single	NEMA 5-20P
PUCH-14SAO	120	8	60	Single	NEMA 5-15P
PUCH-14SAO-PT	120	8	60	Single	NEMA 5-15P
PUCH-24SAO	120	16	60	Single	NEMA 5-20P
PUCH-24SAO-PT	120	16	60	Single	NEMA 5-20P

European Ratings-Ambient Cabinets

Model	Volts	Amps	Hz	Plug Receptacle	Plug Receptacle
PUCA-24S-I	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-24S-PTI	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-14SAO-I	230	0.4	60	C, E, F, G	C, E, F, G
PUCA-14SAO-PTI	230	0.4	60	C, E, F, G	C, E, F, G
PUCA-24SAO-I	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-24SAO-PTI	230	0.5	60	C, E, F, G	C, E, F, G

European Ratings-Heated Cabinets

Model	Volts	Amps	Hz	Plug Receptacle	Plug Receptacle
PUCH-24S-I	230	8	60	C, E, F, G	C, E, F, G
PUCH-24S-PTI	230	8	60	C, E, F, G	C, E, F, G
PUCH-14SAO-I	230	4	60	C, E, F, G	C, E, F, G
PUCH-14SAO-PTI	230	4	60	C, E, F, G	C, E, F, G
PUCH-24SAO-I	230	8	60	C, E, F, G	C, E, F, G
PUCH-24SAO-PTI	230	8	60	C, E, F, G	C, E, F, G

Note: Model numbers may include C, L or R designation to indicate location of control screen on the front of the cabinet.

SPECIFICATIONS—COUNTER-TOP HEATED AND AMBIENT MODELS



PUCH-23SL (left side controls)

Carter-Hoffmann counter-top PUC Smart Order Pick Up cabinets are designed for automated pick-up, carry-out and drop-off. Add-on cabinets can be connected to Master cabinets for flexible capacity. Cabinets are connected via Ethernet or WI-FI to generate an order code for notification. They feature a capacitive touchscreen with scanner for order loading and pick-up. They can be stand-alone for manual order entry or can be integrated with POS software for seamless function, data collection and analytics. Software includes order management, customer notification and cleaning cycle notification. Stainless steel construction with anti-microbial powder-coated exterior. Each locker is 12"W x 14"H x 14"D (304 x 356 x 356 mm) with an automatic pop-latch door, manual close.

Cabinets come in heated or ambient, counter-top or floor models, front-loaded or pass-through, master cabinet controls in center, on the left or on the right; doors have a polycarbonate viewing window.



Specifications

Model Number	Number of Cubbies	Loading Style	Height		Depth		Width		Shipping Weight	
			in	mm	in	mm	in	mm	lbs	kg
PUCA-23S	6	Front	56	1422	15 ⁵ / ₈	397	44 ¹ / ₄	1124	250	113
PUCA-23S-PT	6	Pass-Thru	56	1422	15 ⁵ / ₈	397	44 ¹ / ₄	1124	250	113
PUCA-13SAO	3	Front	56	1422	15 ⁵ / ₈	397	17 ¹ / ₈	435	110	50
PUCA-13SAO-PT	3	Pass-Thru	56	1422	15 ⁵ / ₈	397	17 ¹ / ₈	435	110	50
PUCA-23SAO	6	Front	56	1422	15 ⁵ / ₈	397	34 ¹ / ₈	867	250	113
PUCA-23SAO-PT	6	Pass-Thru	56	1422	15 ⁵ / ₈	397	34 ¹ / ₈	867	250	113
PUCH-23S	6	Front	56	1422	15 ⁵ / ₈	397	44 ¹ / ₄	1124	250	113
PUCH-23S-PT	6	Pass-Thru	56	1422	15 ⁵ / ₈	397	44 ¹ / ₄	1124	250	113
PUCH-13SAO	3	Front	56	1422	15 ⁵ / ₈	397	17 ¹ / ₈	435	110	50
PUCH-13SAO-PT	3	Pass-Thru	56	1422	15 ⁵ / ₈	397	17 ¹ / ₈	435	110	50
PUCH-23SAO	6	Front	56	1422	15 ⁵ / ₈	397	34 ¹ / ₈	867	250	113
PUCH-23SAO-PT	6	Pass-Thru	56	1422	15 ⁵ / ₈	397	34 ¹ / ₈	867	250	113

Electrical Characteristics-Ambient Cabinets

Model	Volts	Amps	Hz	Phase	Plug
PUCA-23S	120	1	60	Single	NEMA 5-15P
PUCA-23S-PT	120	1	60	Single	NEMA 5-15P
PUCA-13SAO	120	0.75	60	Single	NEMA 5-15P
PUCA-13SAO-PT	120	0.75	60	Single	NEMA 5-15P
PUCA-23SAO	120	1	60	Single	NEMA 5-15P
PUCA-23SAO-PT	120	1	60	Single	NEMA 5-15P

Electrical Characteristics-Ambient Cabinets

Model	Volts	Amps	Hz	Phase	Plug
PUCH-23S	120 ⁷	12	60	Single	NEMA 5-15P
PUCH-23S-PT	120	12	60	Single	NEMA 5-15P
PUCH-13SAO	120	6	60	Single	NEMA 5-15P
PUCH-13SAO-PT	120	6	60	Single	NEMA 5-15P
PUCH-23SAO	120	12	60	Single	NEMA 5-15P
PUCH-23SAO-PT	120	12	60	Single	NEMA 5-15P

European Ratings-Heated Cabinets

Model	Volts	Amps	Hz	Plug Receptacle	Plug Receptacle
PUCA-23S-I	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-23S-PTI	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-13SAO-I	230	0.4	60	C, E, F, G	C, E, F, G
PUCA-13SAO-PTI	230	0.4	60	C, E, F, G	C, E, F, G
PUCA-23SAO-I	230	0.5	60	C, E, F, G	C, E, F, G
PUCA-23SAO-PTI	230	0.5	60	C, E, F, G	C, E, F, G

European Ratings-Heated Cabinets

Model	Volts	Amps	Hz	Plug Receptacle	Plug Receptacle
PUCH-23S-I	230	6	60	C, E, F, G	C, E, F, G
PUCH-23S-PTI	230	6	60	C, E, F, G	C, E, F, G
PUCH-13SAO-I	230	3	60	C, E, F, G	C, E, F, G
PUCH-13SAO-PTI	230	3	60	C, E, F, G	C, E, F, G
PUCH-23SAO-I	230	6	60	C, E, F, G	C, E, F, G
PUCH-23SAO-PTI	230	6	60	C, E, F, G	C, E, F, G

Note: Model numbers may include C, L or R designation to indicate location of control screen on the front of the cabinet.

UNPACKING AND INSTALLATION



DANGER: Electric Shock Hazard

All servicing requiring access to non-insulated components must be performed by qualified service personnel. Do not open any access panels which require the use of tools. Failure to heed this warning can result in electrical shock. Disconnect this appliance from electrical power before performing any maintenance or servicing.



WARNING: Injury Hazard

All installation procedures must be performed by qualified personnel with full knowledge of all applicable electrical codes. Failure could result in property damage and personal injury.



WARNING Electric Shock Hazard

Appliance must be plugged into a properly grounded receptacle to prevent possible shock hazard. Electrical shock will cause death or serious injury.



WARNING:

Risk of personal injury

Installation procedures must be performed by a qualified technician with full knowledge of all applicable electrical codes. Failure can result in personal injury and property damage.



CAUTION:

Electrical Shock Hazard

The ground prong of the power cord is part of a system designed to protect you from electric shock in the event of internal damage. DO NOT cut off the large round ground prong or twist a blade to fit an existing receptacle.



IMPORTANT:

Power cord is 9' long (15A cabinets) or 6' long (20A cabinets). If necessary, contact a licensed electrician to install an appropriate electrical circuit and proper receptacle. DO NOT use an extension cord.



IMPORTANT:

Damage to unit due to being connected to the wrong voltage or phase is **NOT** covered by warranty.



IMPORTANT:

Place the cabinet in a space that is 80°F (27°C) or below. Temperatures above 80°F (27°C) may affect performance.

UNPACKING

Unpack the appliance and any accessories according to the instructions below. Ensure that all packing materials and protective plastic has been removed from the unit. Inspect all components for completeness and condition.

NOTE: DO NOT discard the carton or other packing materials until you have inspected the appliance for hidden damage and tested it for proper operation. Refer to *SHIPPING DAMAGE CLAIM PROCEDURE* on PAGE 17.

Tools Required:

Box cutter or knife to cut plastic

Tin snips to cut banding material

Forklift, pallet jack or other appropriate lifting device

1) Using box cutter or knife, remove plastic that is wrapped around the unit. Take care not to slice through the cardboard as this could damage the finish on the cabinet.

2) Using tin snips, remove and dispose of metal banding. Then, remove the cardboard and shipping foam.



UNPACKING AND INSTALLATION (continued)



INSTALLATION CLEARANCES: Allow at least 2" ventilation gap at the top, sides and rear of the cabinet. Allow at least 36" clearance at the front of the cabinet. Pass through cabinets require 36" at the front and rear of the cabinet.



Before using, familiarize yourself with the appliance controls. Read entire manual before operating this cabinet.



- 3) Using an appropriate device, such as forklift or pallet jack, lift the unit off of the pallet, remove the pallet, and then lower the cabinet to the ground.
- 4) Move the cabinet to the desired location.
- 5) Lock the front two casters to hold the cabinet in place.

Appliance should be thoroughly cleaned before use. See CLEANING INSTRUCTIONS, page 16.

INSTALLATION

Counter-Top Models

Tools Needed: NSF approved food grade silicone, level

1. Place the cabinet in an area where the ambient air temperature is constant and at least 70°F (21°C). Make sure the countertop is fixed, level and strong enough to support the weight of the cabinet and it is at the proper counter height for convenient use.
2. Verify that the unit is level. The unit must be within 0.5° of level. Use shims to level the unit, if necessary.
3. Apply NSF-approved sealant around the edge of the unit and the countertop to seal it in place.

Floor Models




Tools Needed: power drill, concrete screws, anchors, level

Floor mount units are shipped with anti-slip brackets to affix the cabinet to the floor and provide stability. Use the holes on the anti-slip brackets as a template to install a floor mount model.



WARNING: Use extreme caution when moving and tipping unit during installation. Size and weight of the unit create significant tip and pinch point hazards. Remain aware and keep clear of the unit/pinch points while tipping to avoid serious injury.

Figure 1.1 Location of bracket screws

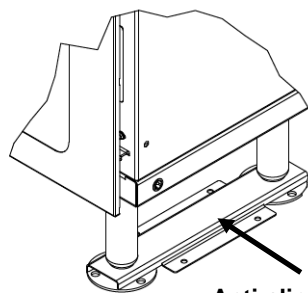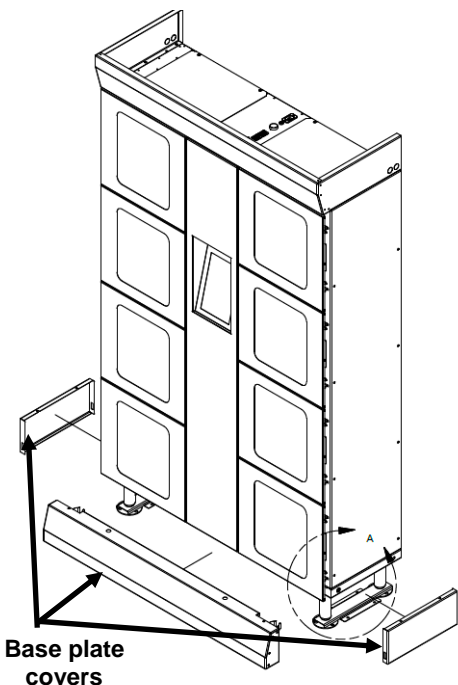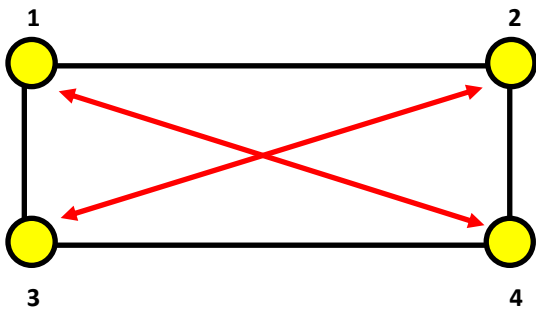

1. Place the cabinet in an area where the ambient temperature is constant and at least 70°F (21°C).
2. Mark the floor according to the 4 holes on the anti-slip brackets on the cabinet. This is where the screws will go. It is important that at least 2 of the 4 screws be used with each bracket to affix the unit to the floor. Four screws are recommended. NOTE: If only 2 screws are used, install them according to the locations shown in Fig. 1.1, i.e. locations 1 & 4 or 2 & 3
3. After marking the locations, carefully move the unit aside to drill floor holes
4. Pre-drill the holes with the appropriate drill bit
5. Install floor anchors
6. Move the cabinet back in place
7. Level the cabinet, using the leg adjustment. The unit must be within 0.5° of level.
8. Secure the unit with appropriate fasteners
9. Install the base plate covers (included)

UNPACKING AND INSTALLATION (continued)



CAUTION:

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



CAUTION:

Maximum load of product, per door, is 4 pounds (1.8 kg). Do not overload.

NOT PERFORMANCE TESTED FOR THE STORAGE, DISPLAY OR HOLDING OF POTENTIALLY HAZARDOUS FOODS (Label Part Number 18312-0698)

ELECTRICAL CONNECTION


1. Locate the power cord connection at the rear top of the cabinet (Figure 2.1). Connect the power cord to the cabinet.
- 2.
3. Plug the cabinet into a properly grounded, dedicated 120 volt electrical receptacle with supplied power cord.
- 4.
5. European units will need an appropriate 230 volt power plug installed to the supplied cord by a licensed electrician.

See charts on the specification pages 3 and 4 and verify electrical information for your particular cabinet by consulting the serial tag on the cabinet for the model number and electrical rating. **DO NOT MODIFY CORD PLUG.**

NETWORK CONNECTION

1. Plug network connection into the Ethernet jack, located at the rear top of the cabinet. (Figure 2.1)
2. If adding an ADD-ON cabinet, connect the ADD-ON cabinet with an Ethernet cable to the unused jack on the MASTER CABINET and to any unused Ethernet jack on the ADD-ON cabinet.
3. Turn on the scanner light(s) using the toggle switch(es) near the cable jacks.
4. Proceed with the start-up procedure (page 8).

Figure 2.1

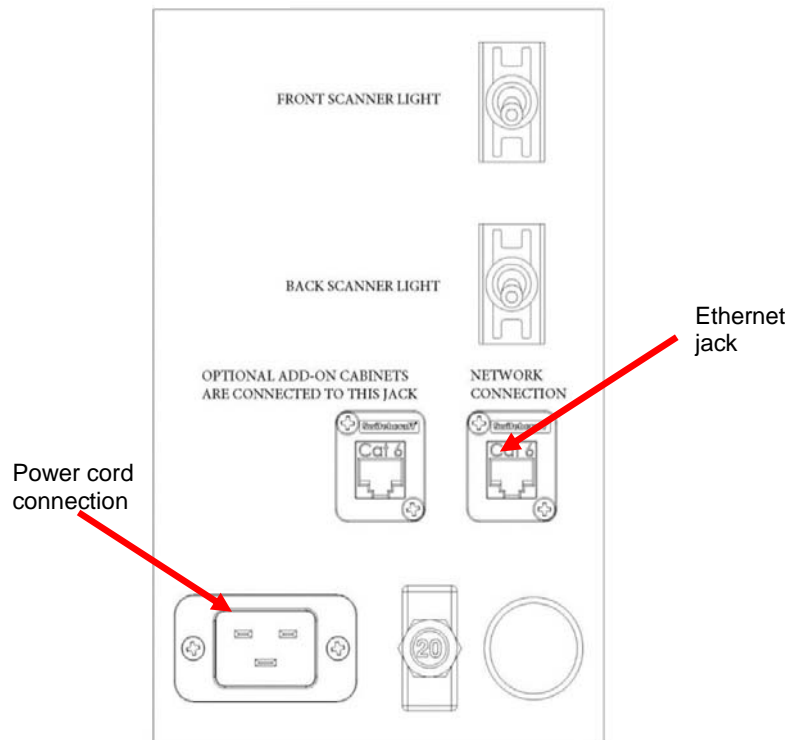


GROUNDING INSTRUCTIONS

This appliance is equipped with a cord having a grounding wire with a grounding plug which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electrical current.

WARNING-Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

START-UP: CONNECTING WI-FI

1.

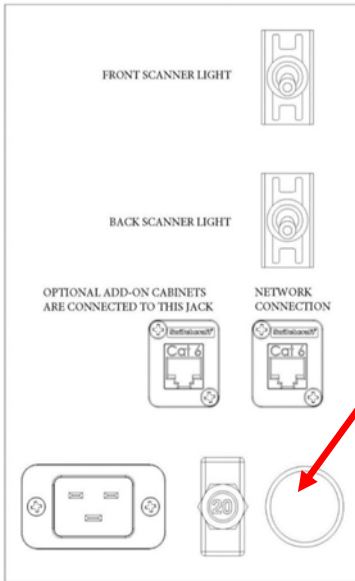

NOTE: If there are add-on cabinets, plug in and turn on the add-on cabinet(s) prior to turning on the master cabinet. This allows the control on the master cabinet to recognize the add-on(s) during the boot up.

Push in the black ON/OFF switch, located at the top rear of the cabinet on the control side.

The cabinet will turn on and boot up to the home screen on the tablet.


CONNECTING WIFI

2.



On the ORDER MANAGEMENT screen, press the PUC logo


3.

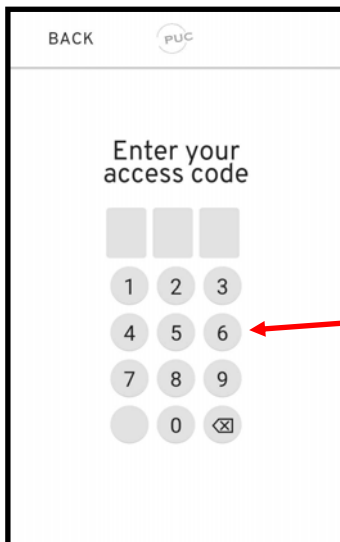

Enter 008 on the keypad to access the ORDER MANAGEMENT SCREEN


START-UP: CONNECTING WIFI (continued)

4.

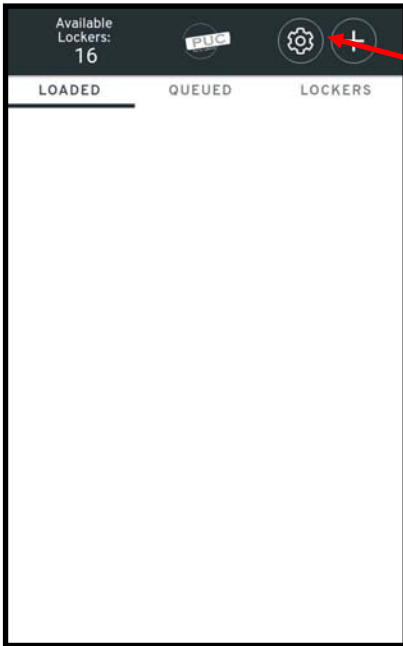


On the ORDER MANAGEMENT screen, press the gear symbol

5.

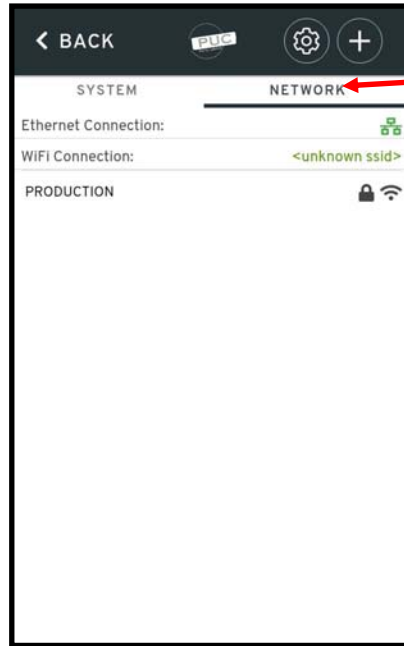

Then press NETWORK

6.

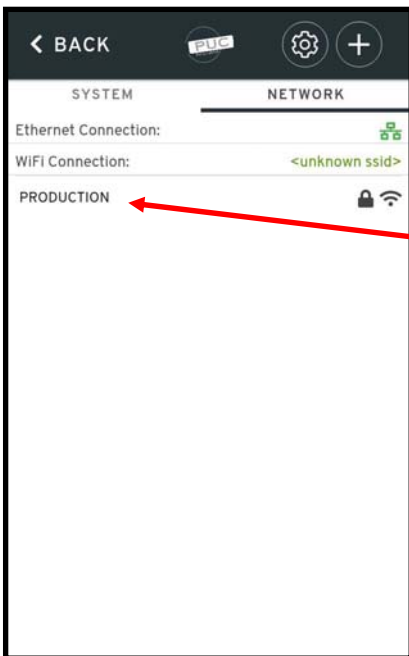


Select your preferred WiFi network

7.



Enter the password for your preferred WiFi network.

START-UP: OPERATION

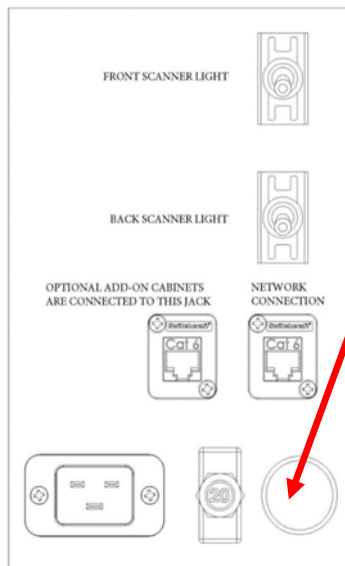

Push in ON/OFF switch located at rear of cabinet.

The cabinet will turn on and boot up to the HOME SCREEN.


MANUAL OPERATION

HOME SCREEN




On the HOME Screen, press the PUC logo at the top.

ORDER MANAGEMENT SCREEN

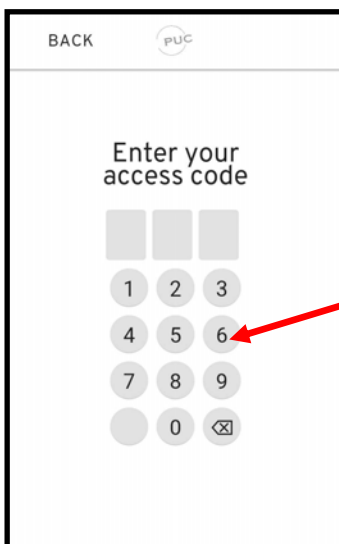


Press 008 on the keypad to access the ORDER MANAGEMENT screen.


MANUAL OPERATION (continued)

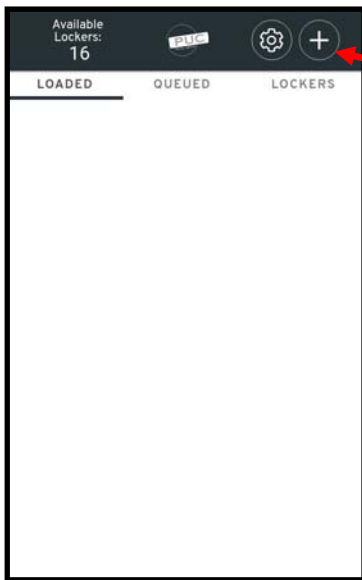

To load an order, press the + icon on the MANAGEMENT SCREEN.

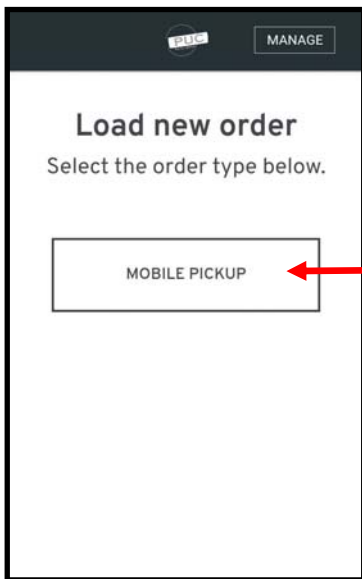


Press MOBILE PICKUP on the LOAD NEW ORDER SCREEN

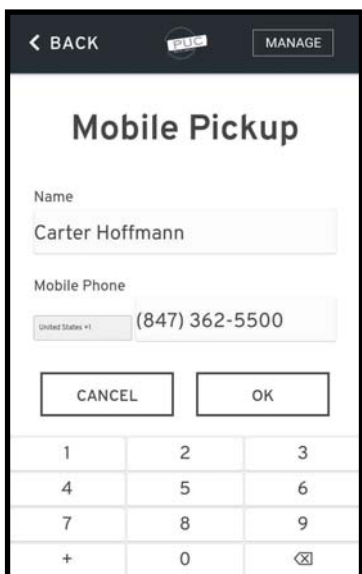

At the MOBILE PICKUP SCREEN, type in the name and phone number for the order.

MANUAL OPERATION (continued)

MOBILE PICKUP SCREEN

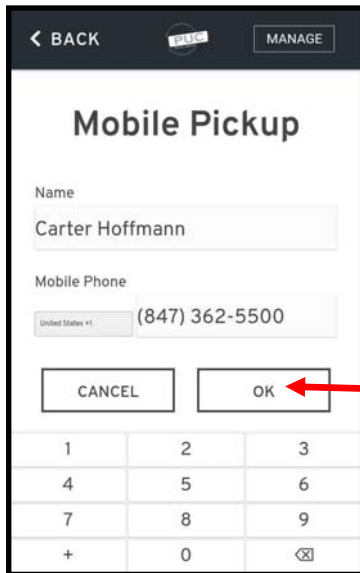

After entering the name and phone number, press OK.

LOAD ORDER SCREEN



The LOAD ORDER screen will appear, and the next available locker will open.

If more than one locker is needed, press the ADD LOCKER button and another available locker will open.

Load the order into the indicated locker(s). Note: PUC will not allow you to move past this screen if the order is not loaded or if it is placed in the incorrect locker.

On front-loading cabinets, close the door(s) after loading.

HOME SCREEN



The cabinet will revert to the HOME SCREEN.

The customer will receive a text with a 3-digit numerical and QR code for pick up.

When the customer arrives, they can enter the 3 digit code on the HOME SCREEN or scan the QR code using the scanner above the HOME SCREEN.

Code 928.

Hi, Joe. Your PUC order is ready for pickup. Look for the Pickup Cabinet in the lobby, then scan the QR code or enter your code 928. You're picking up from 1551 McCormick Avenue, Mundelein, IL 60060, phone [847-362-5500](tel:847-362-5500). Thanks!



MANUAL OPERATION (continued)

PICK UP ORDER SCREEN



The door(s) for the locker(s) that contain their order and the PICK UP ORDER SCREEN will indicate the locker location(s) for the order.

The customer can retrieve their order from the locker(s) and then close the door(s).

TO VIEW CURRENT ORDERS AND OCCUPIED ORDERS



1. To view current orders that are loaded, press the PUC logo on the HOME SCREEN



3. The cabinet will show the ORDER MANAGEMENT SCREEN.

Press the LOADED tab.

The screen will display:

- Available lockers
- Lockers that are currently filled

Press the gear key to return to the HOME SCREEN

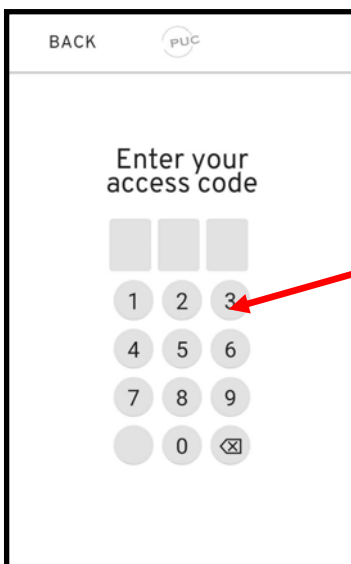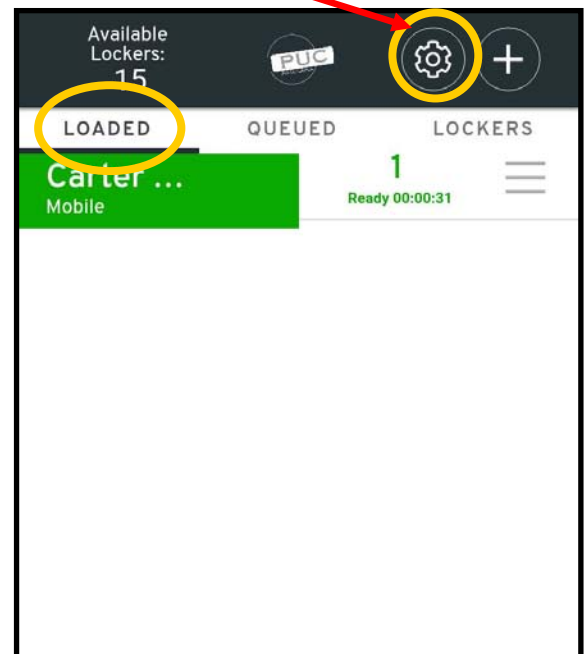

2. Press 008 on the keypad to access the ORDER MANAGEMENT screen.


PROGRAMMING THE TEMPERATURE (heated cabinets only)

HOME SCREEN




PUCH cabinets can operate with or without heat. To turn the heat ON or OFF and adjust the temperature setting, follow this procedure:

On the HOME SCREEN, press the PUC logo

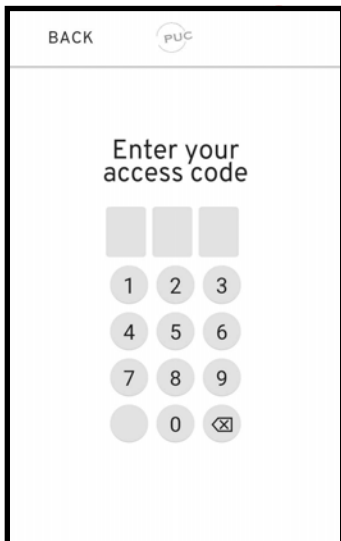

Enter code 008.


ORDER MANAGEMENT

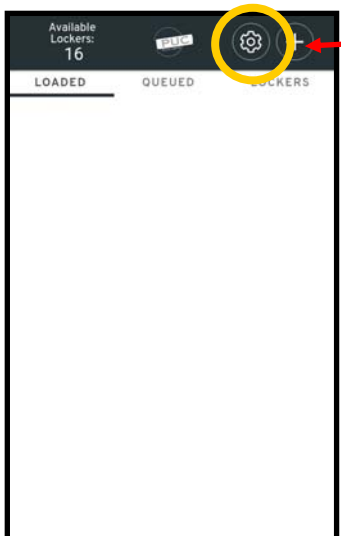

On the ORDER MANAGEMENT SCREEN, press the “gear” symbol to go to the CONFIGURE screen.


PROGRAMMING THE TEMPERATURE (continued)

CONFIGURE SCREEN

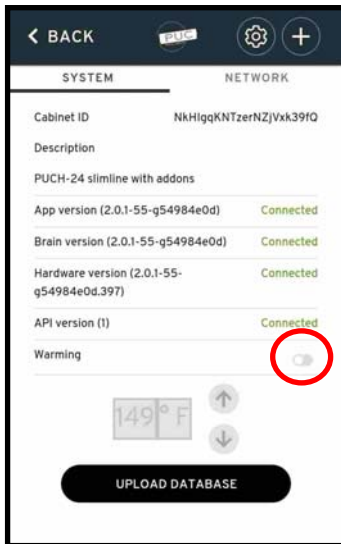


To turn on heat in the lockers, swipe the **Warming** button to the right.

Warming button off

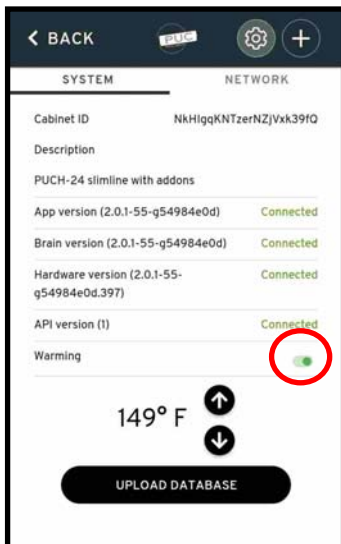

Warming button on (temperature setting function will appear)

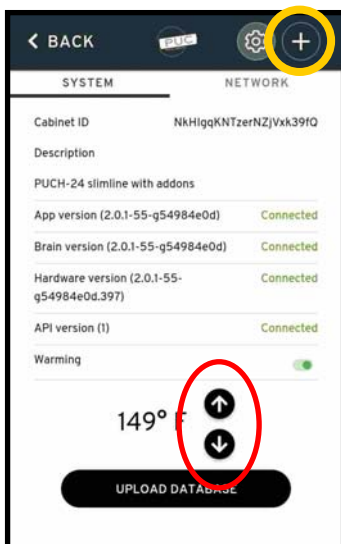

To adjust the temperature setting:

Press the UP arrow to increase the temperature.

Press the DOWN arrow to decrease the temperature.

The temperature setting appears on the left side of the arrows.

Minimum setting: 68°F

Maximum setting: 176°F

To confirm your changes and exit the CONFIGURE screen, press the

+ icon on the upper right side of the screen.

CLEANING



WARNING: ELECTRIC SHOCK HAZARD

Unplug the unit from electric power before performing cleaning or maintenance.




WARNING: ELECTRIC SHOCK HAZARD

DO NOT spray or splash water on the control panel or wiring.



CAUTION: CABINET DAMAGE

Do not tip cabinet to drain excess water. Permanent damage to the cabinet will result. This is also dangerous and may cause personal injury. Use a clean dry cloth to mop any excess water inside cabinet after cleaning.

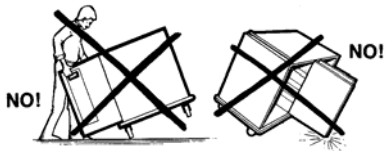

CAUTION! Hot Surface!

Allow cabinet to cool completely prior to cleaning.



WARNING:

Risk of personal injury

Caution must be taken when using, cleaning and servicing the appliance. Liquids may spill creating a slip hazard on the floor.

Routine cleaning on a regular basis is vital to the proper operation and overall performance of your cabinet. Follow these procedures to keep your cabinet sanitary and running at peak performance.

For ALL cleaning procedures, turn the main power switch OFF and unplug the cabinet to before cleaning. DO NOT spray or splash water on the electrical components, tablet, control panel, or wiring. Cleaning should be performed when cabinet is cool and empty.

1. Clean the interior and exterior with a clean, moist soapy towel. Rinse with clean damp towel. Do not use steel wool or scouring pads.
2. To clean stainless steel surfaces use only cleansers, detergents, degreasers, or sanitizers that are certified to be "chloride-free" and "phosphate-free," and cleansers, degreasers, or sanitizers only in the recommended concentrations*. DO NOT exceed recommended concentrations or mixing ratios. After cleaning and sanitizing, rinse all exposed surfaces thoroughly with large amounts of clean, clear water. Wipe off any standing liquid or residue from all surfaces, corners and rear edges.
3. To clean windows, use a window cleaner or damp soapy towel. Rinse with clean moist towel. Use only soft towels. Do not use scouring pads, steel wool or any other towel that could scratch the polycarbonate windows. Damage caused by rough towels is permanent.
4. Vinyl trim should be washed with a chlorine-free detergent and water. Rinse thoroughly with clear water and allow to dry. Never use abrasive cleaners, waxes, car polish, or substances containing strong aromatic solvents or alcohol. Use of **direct steam / hot water** cleaning at temperatures above 190°F may result in "bubbling" or loosening of vinyl adhesive.

***IMPORTANT:** Cleansers, detergents, degreasers, sanitizers or bleaching agents that contain **chlorides or phosphates will cause permanent damage** to stainless steel products. This damage appears as pits, eruptions, voids, small holes, cracks, severe discolorations or dulling of the metal finish. Water with a high chlorine content can also damage stainless steel. If unsure of your water quality, we recommend you have it tested. **THIS DAMAGE IS PERMANENT, COSTLY TO REPAIR, AND IS NOT COVERED BY WARRANTY.**

SERVICE EXPECTATIONS

SERVICE PHILOSOPHY

Carter-Hoffmann has a reputation for manufacturing rugged, dependable foodservice equipment that permits foodservice professionals serve more food products to more people, and thus, to grow their business.

Our goal is not only to provide the best food service equipment for the price, but also to back it up with after-sale service that is responsive fast, efficient and professional. To ensure a clear understanding of our goals, expectations, and responsibilities, we have prepared this brief document.

Carter-Hoffmann products are innovative and efficient. They are easy to use, easy to clean and easy to maintain. Although the products are quite reliable they are also designed for easy repair. We believe that a malfunction to a Carter-Hoffmann product should cause as little inconvenience to the customer as possible. Our aim is to provide "same day"/first time fix" repair service on all of our products. We are dedicated to making every aspect of our customer service the standard by which others are judged.

END-USER RESPONSIBILITIES

While we all strive to serve our mutual customers as well as possible that does not mean that the end-user (including his employees) does not share some responsibilities.

1. All shipping damage must be noted on the freight bill when the shipment is received. Any freight damages must be collected from the Freight Company, NOT Carter-Hoffmann.
2. The end-user should be advised beforehand to carefully unpack and inspect all products when they are received **BEFORE SIGNING THE SHIPPER'S RECEIPT OF DELIVERY.**
3. The end-user must provide a safe, dry, level surface for the equipment to be placed upon.
4. The end-user must provide the proper electrical supply. All in-wall electrical modifications are to be completed by a licensed electrician. All building modifications are the responsibility of the end-user.
5. The end-user must operate, clean and maintain the equipment in accordance with the procedures described in the Operation Manual.
6. Carter-Hoffmann is NOT responsible for any loss of the customer's income, loss of food product, extra labor charges, or any other incidental or consequential costs as a result of the malfunction of our product.
7. The end-user shall allow for on-premises repair of the equipment to be completed at a mutually convenient place and time.

WARRANTY SERVICE

1. Warranty service is to be **initiated** by authorized Carter-Hoffmann personnel only.
2. The service provider is **NOT** authorized to change or extend any of the terms or conditions of our warranty.
3. Initial freight damage is **NOT** covered by the product warranty.

CONFIDENTIALITY

1. The end user and all his employees and sub-agents shall protect and keep confidential Carter-Hoffmann's proprietary designs, information, and knowledge.
2. All literature and informational materials provided by Carter-Hoffmann are to be considered confidential; they remain Carter-Hoffmann's property; and are not to be reproduced without our prior written consent.

SHIPPING DAMAGE CLAIM PROCEDURE

NOTE: For your protection, please note that equipment in this shipment was carefully inspected and packaged by skilled personnel before leaving the factory. Upon acceptance of this shipment, the transportation company assumes full responsibility for its safe delivery.

IF SHIPMENT ARRIVES DAMAGED:

1. **VISIBLE LOSS OR DAMAGE:** Be certain that any visible loss or damage is noted on the freight bill or express receipt, and that the note of loss or damage is signed by the delivery person.
2. **FILE CLAIM FOR DAMAGE IMMEDIATELY:** Regardless of the extent of the damage.
3. **CONCEALED LOSS OR DAMAGE:** if damage is unnoticed until the merchandise is unpacked, notify the transportation company or carrier immediately, and file "CONCEALED DAMAGE" claim with them. This should be done within ten (10) days from the date the delivery was made to you. **Be sure to retain the container for inspection.**
4. Carter-Hoffmann cannot assume liability for damage or loss incurred in transit. We will, however, at your request, supply you with the necessary documents to support your claim.

WARRANTY

Carter-Hoffmann Warranty:

Carter-Hoffmann ("CARTER-HOFFMANN") warrants to the initial purchaser of its standard Carter Line Products that CARTER-HOFFMANN will, at its option, repair or replace, during the warranty period set forth below, any part of such products made necessary due to a defect in material or workmanship which is present when the product leaves its factory and which manifests itself during the warranty period under normal use and service.

*This warranty applies only to original equipment owned and possessed by the initial purchaser and the warranty period begins on the date of original shipment from the CARTER-HOFFMANN factory and extends as follows: **to component parts and labor for 12 months (36 months on hotLOGIX and VAPORPRO holding cabinets and cook & hold cabinets); to refrigeration compressor unit for one year** (limited to replacement only - not to include labor for removal, repair or replacement).*

Repair or replacements under this warranty will be performed, unless otherwise authorized in writing by CARTER-HOFFMANN, at its factory. All parts or components to be repaired or replaced under this warranty are to be shipped prepaid to CARTER-HOFFMANN, with reimbursement credit for such part or component to be given if found by CARTER-HOFFMANN to be defective.

CARTER-HOFFMANN neither makes nor assumes and does not authorize any other person to make or assume any obligation or liability in connection with its products other than that covered in this warranty. This warranty applies only within the continental United States and Canada. In Alaska and Hawaii, this warranty applies only to and is limited to the supply of replacement parts.

Warranty Exclusions and Limitations:

Any implied warranty of merchantability or fitness for a particular purpose is hereby specifically disclaimed by CARTER-HOFFMANN. There are no warranties, expressed or implied, which extend beyond the description on the face hereof. This warranty does not cover and CARTER-HOFFMANN shall not under any circumstances be liable for any incidental, consequential or other damages (such as injury to persons or property, loss of time, inconvenience, loss of business or profits, or other matters not specifically covered) arising in connection with the use of, inability to use, or failure of these products.

Specifications subject to change through product improvement and innovation.

Carter-Hoffmann

1551 McCormick Ave.

Mundelein, Illinois, 60060 USA

Phone: 847-362-5500 Toll free: 800-323-9793 Fax: 847-367-8981

Customer Service (Equipment) E-mail: customerservice@carter-hoffmann.com

Technical Service E-mail: technicalservice@carter-hoffmann.com

Company Website: www.carter-hoffmann.com

CFESA

Proud Member

NAFEM
North American Association of
Food Equipment Manufacturers